


## Bowl Installation Guide

- 1.1** Install PSD, INC. Pre-cast plumb, true, and level in accordance with installation instructions and the PSD Technical Data Sheet. All pre-cast should be set by experienced and qualified pre-cast masonry installers.
- 1.2** All substrate receiving PSD, INC. Pre-cast shall be cleaned of any oil, paint, dust, debris, etc. Surface shall be smooth, level, and competent of a firm and permanent adhesion to the setting material.
- 1.3** Approximately make a 3/4" wide x 1/4" thick bead of rainbuster. This will help prevent water leakage.
- 1.4** Approximately make a 3/4" wide x 1/4" thick bead of exterior liquid nails or PL- or PL (construction adhesive). This will secure the bowl to the pilaster cap.
- 1.5** Install bowl and leave a small recess for a grout joint. Grout the base of bowl preferably later in the day to allow for a slow cure.
- 1.6** It is critical that all PSD, INC. Pre-cast shall be protected from splashing mortar or damage by other trades. If a foreign matter does contact the pre-cast, it must be removed immediately.
- 1.7** The repair of PSD, INC. Pre-cast, whether it be chipped, cracked, or damaged, shall be done only by masons skilled in this work with materials furnished by the manufacturer and according to their direction.
- 1.8** PSD, INC. Pre-cast shall be cleaned where necessary by scrubbing with a bristle fiber brush, using soap powder and water. Then rinse thoroughly and generously with water. No acid or prepared cleaners shall be used without the approval of PSD, INC.

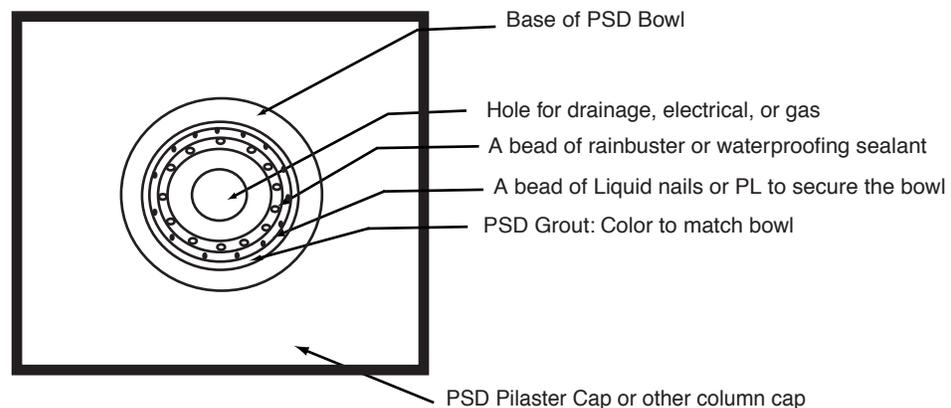

Option A  
Top View